


U8414BL

SL3/SL4 HARDCASE PROTECTOR


This guide illustrates how to configure the internal padding correctly for Rane Serato SL3 and SL4 controllers.

REMOVABLE PADDING

A

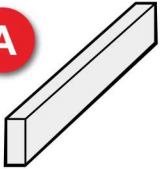

B

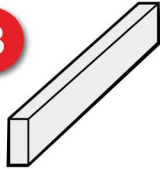


C



RANE SERATO SL3

Remark:
Use all removable padding

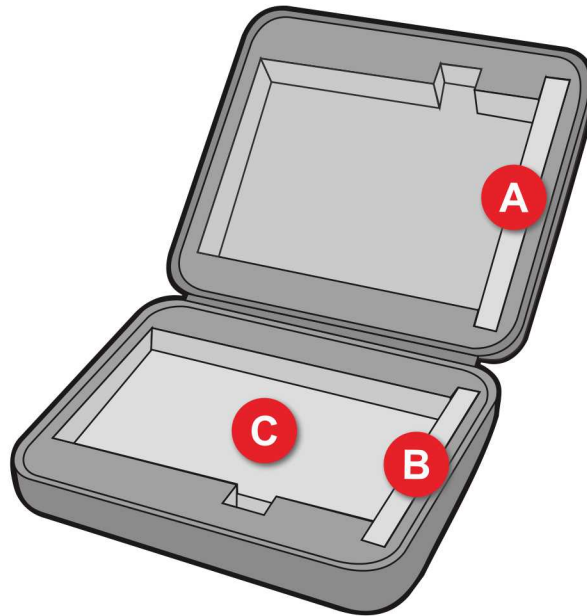

RANE SERATO SL4

Remark:
Remove **A B C** padding

